



ul. Konstantynowska 79/81
95-200 Pabianice
tel/fax 48 42 2270971 POLAND
e-mail: fif@fif.com.pl

BZ-2 FUSE MODULES



www.fif.com.pl

F&F products are covered by an 24 months warranty from date of purchase

PURPOSE

Fuse modules BZ-2 serve as a security device for electric receivers against current increase over the nominal current value for the secured receiver.

FUNCTIONING


Fuse activation (blowing of fuse link) is signalled by shining of red LED.

ASSEMBLY

1. Take OFF the power.
2. Put on the modules on the rail in the switchgearbox.
3. Connect to system with wiring diagram.

ATTENTION!!! When supply is from direct current important is polarity of connection. In cause of wrong connection a LED don't signalise activation of fuse.



4. Take OFF the "head" of binding fuse.
5. Put on insert fuse (request value) in the "head" of binding
6. Take ON the "head" of binding with insert fuse.

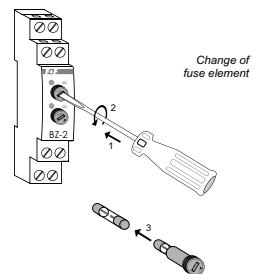

TECHNICAL DATA

fuse	fuse element Ø5×20mm
voltage	250V
current	<6,3A
working temperature	-25÷50°C
connection	screw terminals 2,5mm ²
dimensions	1 module (18mm)
fixing	on rail TH-35

  WIRING DIAGRAM



A090622