



F&F Filipowski sp. j.
Konstantynowska 79/81 95-200 Pabianice
phone/fax: (+48 42) 215 23 83 / 227 09 71 POLAND
http://www.fif.com.pl e-mail: biuro@fif.com.pl

FUSE MODULE

BZ-4

WARRANTY. The F&F products are covered by a warranty of the 24 months from the date of purchase. Effective only with proof of purchase. Contact your dealer directly with us. More information how to make a complaint can be found on the website: www.fif.com.pl/reklamacje



Do not dispose of this device in the trash along with other waste! According to the Law on Waste, electro coming from households free of charge and can give any amount to up to that end point of collection, as well as to store the occasion of the purchase of new equipment (in accordance with the principle of old-for-new, regardless of brand). Electro thrown in the trash or abandoned in nature, pose a threat to the environment and human health.

Purpose

Fuse module BZ-4 serves as a security device for electric receivers against current increase over the nominal current value for the secured receiver.

Functioning

Fuse activation (blowing of fuse link) is signalled by shining of red LED.

Assembly

1. Take OFF the power.

2. Put on the modules on the rail in the switchgear box.

3. Connect to system with wiring diagram.

ATTENTION!

When supply is from direct current important is polarity of connection. In cause of wrong connection a LED don't signalise activation of fuse.


4. Take OFF the „head” of binding fuse.

5. Put on insert fuse (request value) in the „head” of binding.


6. Take ON the „head” of binding with insert fuse.

- 1 -

Change of
fuse element

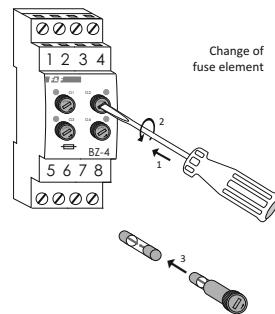

Wiring diagram

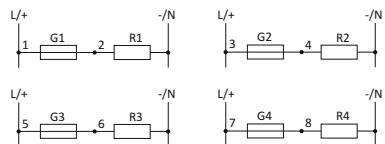

Technical data

Ø5x20mm fuse element
250V AC/DC
<6.3A
2.5mm² screw terminals
-25÷50°C
2 modules (35mm)
on TH-35 rail
IP20

D170731

- 2 -