



F&F Filipowski sp. j.
ul. Konstantynowska 79/81
95-200 Pabianice
tel/fax 48 42 2270971 POLAND
e-mail: fif@fif.com.pl

PCZ-526.2 (E)

PROGRAMMABLE CONTROL TIMERS astronomic type




www.fif.com.pl

F&F products are covered by an 24 months warranty from date of purchase

PURPOSE

Astronomical control timers is as for enclosing and switching off of illumination or according to other electric receivers 24 hours, astronomical points of west and sunrise

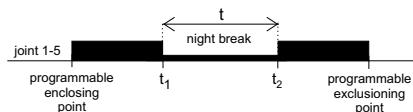

ATTENTION!

It touches east and they are defined sunset as moment, when it touches center of sunny disk horizon it (parameter $h = -0,583^\circ$). Deviation of row several minute commits from the point of view of simplification of account relatively to data by indicated „HM Nautical Almanac Office”.

DESCRIPTION OF WORK AND FUNCTIONS

AUTOMATIC WORK - according to program points of enclosures and switching off joint [sign \odot on the left of display]

HANDIWORK- [ON] - enduring connection of joint (position 1-5) or **[OFF]** - enduring switch off joint (position 1-6) by activated AUTOMATIC WORK [lack of sign \odot on the left of display]

PROGRAMMABLE POINT OF ENCLOSURE - time of enclosure in foothold about astronomical point of sunset indicated joint (position 1-5) and HOUR SLIP by user program and TIME CORRECTION.

PROGRAMMABLE POINT OF EXCLUSION - time of exclusion in foothold about astronomical point of sunset indicated joint (position 1-6) and HOUR SLIP by user program and TIME CORRECTION.

CONFIGURATION - application of LOCALIZATION and assignment of POINT OF PROGRAM ENCLOSURE and EXCLUSION

LOCALIZATION - application of CODE COORDINATES or manual optional setups geographic coordinates (for CODE COORDINATES 86 - SITE USER)

COORDINATES CODE - for detailed cities assign city geographic facilitating inscription localization (coordinates and assign serve codes in table memorial)

HOUR SLIP - assignment of geographic time zone in range $\pm 1+12$ relatively to universal time greenwich UT (00). For poland +1 hour. Points of time east and sunset they undergo parallel slip about served value .

TIME CORRECTION - acceleration or delay of time of enclosure or relatively to astronomical time points of east exclusion (switching off) and sunset. Setups in range $\pm 99\text{min}$ for point of west and sunrise are performed in apart.

DST - Daylight Saving Time - global name of summer time (free translation time of winning sunny light). Function enabling exclusion automatic change time.

NIGHT BREAK - set by user time of programming points of enclosure and exclusion.

CHANNEL - user programming line with sets in KONFIGURATION MODE and NIGHTBREAK setting a enclosure joint.


FUNCTIONING

The astronomical timer activates and deactivates a device at certain hour, i.e. at sunrise and sunset. Should more settings that are precise be required for locations of different geographical co-ordinates, there is an option to set a given longitude and latitude or select a special code which entails automatic setting of these co-ordinates for a given place in Europe (list of locations and their codes may be found in the manual). Time points of enclosing and exclusion are set by user by HOUR SLIP MODE or TIME CORRECTION MODE it means , possible is speed up or delay a programmable time points of enclosing or exclusion for sunrise and sunset. Possible is programming a night break between enclosure and exclusion programming points (take off the power for hour to austerity energy).

TECHNICAL DATA

supply	24-264VAC/DC
current load	2x(<16A)
contacts	2x1P
display maintenance time	non
timer maintenance time	6 years
indication accuracy item	1sec
time deviation	$\pm 1s/24h$
schedule time accuracy item	1min
correction activation and deactivation time	$\pm 0+99\text{min}$
power consumption	1,5W
working temperature	-20+50°C
connection	screw terminals 2,5mm ²
dimensions	2 modules (35mm)
fixing	on the rail TH-35

WIRING DIAGRAM

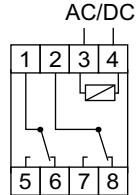

Channell 1:

joint 1-5 "ENCLOSE" [ON]

joint 1-6 "EXCLUSION" [OFF]

Channell 2:

joint 2-7 "ENCLOSE" [ON]

joint 2-8 "EXCLUSION" [OFF]

ASSEMBLY

1. Take OFF the power.
2. Put on the control timer on the rail in the switchgear box.
3. Connect the power cables with wiring diagram.
- 4 Connect the receivers with wiring diagram.
5. Set a correct date (see p. 2) and time (see p3)
6. Set to user configuration (see p4)

5. CONFIGURATION - set to CORRECTION OF TIME, LOCALIZATION AND HOUR DELAY.

Change CONFIGURATION by press MENU >3sec.
ATTENTION! Changes of CONFIGURATION mode are previewed by checking or changing a date (see p2.1), time (see p3.1) and option.

5.1 Timer pass to CORRECTION MODE for sunset point.

ATTENTION!
 Range from -99min to +99min. Value "-" (minus) to speed up to enclose by put number of minutes. Value "+" (plus) delay to enclose by put number of minutes.



By buttons +/- set to number of minutes and enter OK.

5.2 Timer pass to CORRECTION TIME mode for sunrise point

ATTENTION!

Range from -99min to +99min. Value "-" (minus) to speed up switching off by put number of minutes. Value "+" (plus) to delay switching off by put number of minutes.



By buttons +/- set to number of minutes and enter OK.

5.3 Timer pass to configuration mode of LOCALIZATION.

ATTENTION!

Check coordinates code table and find a city which is near your localization and put suitable code. Standard set code is code 79 for Warsaw

ATTENTION!

Choose and accept of code 86 (USER COORDINATES) cause to pass to handiwork mode (see p7.2).



By buttons +/- set to code and enter OK.
 5.4 Timer pass to HOUR SLIP mode..

ATTENTION!

Standard setting for POLAND +01. Range from -12hours to +12hours.
 Value "-" (minus) to move "for rear" parallel astronomical points of sunrise and sunset time by put of number hours.
 Value "+" (plus) to move "forward" parallel astronomical point of sunrise and sunset time by number of put hours.



By buttons +/- set to a value of delay and enter OK.

*Timer automatically pass to setting mode of NIGHT BREAK. (see p6.1)
 *By button MENU accept allow registry and out of programming mode.

6. NIGHT BREAK

Change in option of NIGHT BREAK mode press MENU >3sec.

ATTENTION! Out of settings from NIGHT BREAK is previewed by checking and changing of date (see p2.1), time (see p3.1), option DST (sleep 4.1) and KONFIGURATION (see p5.1).

ATTENTION!

If timer have to work out from NIGHT BREAK set the same value of start and end times.

6.1 Timer pass to setting mode of start minutes of NIGHT BREAK P1 for channel 1(sign 2OFF on the right side).



By buttons +/- set to a minutes and enter OK.

6.2 Timer pass to setting mode of end minutes of NIGHT BREAK.

(sign 1ON on right side).



By buttons +/- set to a hour and enter OK.

*Timer again pass to setting mode of date.(see p2.1)

*By button MENU accept allow registry and out of programming mode.


By buttons +/- set to a minutes and enter OK.

Timer pass to setting mode of hour of end of NIGHT BREAK P2 for channel 2 (sign 2OFF on right side). Repeat action p6.1 and p6.2 to channel 2.



ATTENTION!

* Set a time of NIGHT BREAK make a enclosing and exclusion of joint. They are treat as orders and realized in chronology of set time. Possibility of setting of enclosing and exclusion time of joints with accordance PROGRAMMING ENCLOSING AND EXCLUSION POINTS with NIGHT BRAK times are ilustrate by following diagrams.

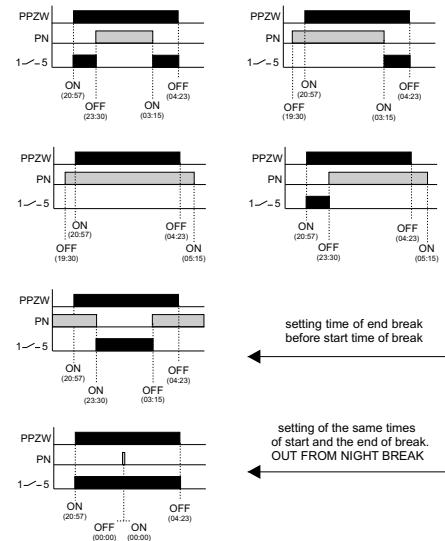

PPZW - programmable points of enclosing and exclusion

PN - night break

/ - joint position (■ - joint enclosed)


7. HANDIWORK SETTING GEOGRAFICAL COORDINATES

7.1 Pass to handiwork setting mode of geografical coordinates is previousied by pass of CONFIGURATION MODE (see p5). In setting mode of COORDINATES CODE set to code of number 86 (USER COORDINATES) and enter OK. Timer pass to setting mode of geografical coordinates

ATTENTION!


Standarts setting coordinates for Warsaw (52°15'N 21°00'E)

7.2 Timer pass to setting mode of width minutes (sign L on the left).

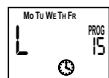

By buttons +/- set to minutes and enter OK..

7.3 Timer pass to of setting mode of geografical coordinates.

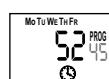

ATTENTION!

Value up than "zero" mean east of geografical lenght coordinates.
Value down than "zero" mean west of geografical lenght coordinates.

By buttons +/- set to value and enter OK..

7.4 Timer pass to of setting mode of minutes of geografical lenght coordinates.



By buttons +/- set to minutes and enter OK..

7.5 ZTimer pass to of setting mode of minutes of geografical lenght coordinates..



ATTENTION!

Value up than "zero" mean east of geografical lenght coordinates.
Value down than "zero" mean west of geografical lenght coordinates.

By buttons +/- set to value and enter OK..
Timer pass to setting mode of HOUR SLIP (see p.4).

8. DELETED MEMORIES - "hard" reset

If you want to delete all settings of DATE, TIME and CONFIGURATION you must together preesing a buttons MENU and - for >3sec.

9. RESET

Restart od procesor is needed when all function of timer are to stoped. Don't delete settings of DATE, TIME and CONFIGURATION MODE from memories. Prees a button RESET for <1sec.

AUTOMATIC FUNCTION OF TIME CHANGE !

Changes time from winter time to summer time is automatically make at the last sunday of march at 2 a.m. (add 1 hour to actual time).

ATTENTION! Possible is take OFF automatic function of time change (see p.4).

PEEP TO A DATE

In AUTOMATIC WORK prees a button +. Timer displaying a set date (dd-mm-yy). After 5 sec timer automatically pass to central level.

PEEP TO A PROGRAMMABLE POINT OF ENCLOSURE AND EXCLUSION

In AUTOMATIC WORK mode next preeser a button OK. see a next settings in configuration:

- programmable point of enclosure for channel 1
- start of night break P1
- end of night break P1
- programmable point of exclusion for channel 1
- programmable point of exclusion for channel 2
- start of night break P2
- end of night break P2
- programmable point of exclusion for channel 2

After 5 sec. timer automatically pass to central level

Example table with enclosure and exclusion points on 22.06.2006 for chosen settings of CONFIGURATION			
ASTRONOMICAL POINT	SUNSET	19:59	
	SUNRISE	3:16	
TIME CORRECTION	ENCLOSURE	+20min	
	EXCLUSION	-15min	
HOUR SLIP		+01	00
PROGRAMMABLE POINTS	ENCLOSURE	21:19	20:19
	EXCLUSION	4:01	3:01
		18:19	

CITY CODE	°N	°E
1. Albania Tirane	41:20:00 °N	019:49:00 °E
2. Austria Salzburg	47:54:00 °N	013:03:00 °E
3. Austria Vienna	48:13:00 °N	016:22:00 °E
4. Belgium Brussels	50:50:00 °N	004:21:00 °E
5. Bosnia Sarajevo	43:52:00 °N	018:26:00 °E
6. Bulgaria Burgas	42:30:00 °N	27:28:00 °E
7. Bulgaria Plovdiv	42:18:00 °N	24:43:00 °E
8. Bulgaria Sofia	42:41:00 °N	23:19:00 °E
9. Croatia Osijek	45:33:00 °N	18:41:00 °E
10. Croatia Pula	44:52:00 °N	13:51:00 °E
11. Croatia Zagreb	45:48:00 °N	015:58:00 °E
12. Cyprus Nicosia	35:10:00 °N	033:22:00 °E
13. Czech Rep. Prague	50:05:00 °N	014:25:00 °E
14. Czech Rep. Olomouc	49:34:60 °N	17:15:00 °E
15. Denmark Copenhagen	55:43:00 °N	012:34:00 °E
16. Finland Helsinki	60:08:00 °N	025:00:00 °E
17. Finland Kuopio	62:54:00 °N	27:41:00 °E
18. Finland Rovaniemi	66:33:07 °N	25:50:51 °E
19. France Ajaccio	41:55:36 °N	8:44:13 °E
20. France Bordeaux	44:50:00 °N	000:34:00 °W
21. France Brest	48:23:00 °N	004:30:00 °W
22. France Lyon	45:46:00 °N	004:50:00 °E
23. France Marseille	43:18:00 °N	005:22:00 °E
24. France Nantes	47:14:00 °N	001:35:00 °W
25. France Paris	48:52:00 °N	002:20:00 °E
26. France Strasbourg	48:35:00 °N	007:45:00 °E
27. Germany Berlin	52:30:00 °N	013:26:00 °E
28. Germany Frankfurt	50:06:00 °N	008:41:00 °E
29. Germany Hamburg	53:33:00 °N	010:00:00 °E
30. Germany Köln	50:53:00 °N	007:00:00 °E
31. Germany München	48:08:00 °N	011:35:00 °E
32. Germany Osnabrück	52:16:00 °N	008:02:00 °E
33. Greece Athens	38:00:00 °N	023:44:00 °E
34. Greece Iraklion	35:20:00 °N	25:09:00 °E
35. Greece Patra	38:14:40 °N	21:44:4 °E
36. Greece Thessalonika	40:38:00 °N	022:58:00 °E
37. Hungary Budapest	47:30:00 °N	019:00:00 °E
38. Iceland Reykjavík	61:09:00 °N	021:58:00 °W
39. Ireland Cork	51:54:00 °N	08:28:00 °W
40. Ireland Dublin	53:20:00 °N	006:15:00 °W
41. Italy Brindisi	40:38:00 °N	17:56:00 °E
42. Italy Cagliari	39:13:00 °N	009:08:00 °E
43. Italy Florence	43:47:00 °N	011:15:00 °E
44. Italy Milan	45:28:00 °N	009:12:00 °E
45. Italy Palermo	38:08:00 °N	013:23:00 °E
46. Italy Rome	41:53:00 °N	012:30:00 °E
47. Luxembourg Luxembourg	49:37:00 °N	006:08:00 °E
48. Macedonia Skopje	42:00:00 °N	021:26:30 °E
49. Moldavia Chisinau	47:14:11 °N	28:49:30 °E
50. Netherlands Amsterdam	52:21:00 °N	004:54:00 °E
51. Norway North Cape	71:10:12 °N	025:47:24 °E
52. Norway Narvik	68:26:00 °N	017:25:00 °E
53. Norway Oslo	59:56:00 °N	010:17:00 °E
54. Norway Trondheim	63:36:00 °N	010:23:00 °E
57. Portugal Lisbon	38:44:00 °N	009:08:00 °W
58. Portugal Pórtalo	41:09:00 °N	008:37:00 °W
59. Romania Bucharest	44:25:00 °N	026:07:00 °E
60. Romania Constanța	44:11:00 °N	28:39:00 °E
61. Romania Cluj	46:47:00 °N	23:36:00 °E
62. Slovakia Košice	48:43:00 °N	21:15:00 °E
63. Slovenia Ljubljana	46:40:00 °N	014:30:00 °E
64. Spain Almeria	36:50:00 °N	2:27:00 °W
65. Spain Barcelona	41:25:00 °N	002:10:00 °E
66. Spain Bilbao	43:15:00 °N	002:56:00 °W
67. Spain La Coruna	43:22:00 °N	8:23:00 °W
68. Spain Seville	37:24:00 °N	005:59:00 °W
69. Spain Valencia	39:29:00 °N	000:24:00 °W
70. Sweden Göteborg	57:45:00 °N	012:00:00 °E
71. Sweden Luleå	65:36:00 °N	22:9:00 °E
72. Sweden Malmö	55:35:00 °N	013:00:00 °E
73. Sweden Stockholm	59:20:00 °N	018:05:00 °E
74. Switzerland Bern	46:57:00 °N	007:26:00 °E
75. Turkey Ararat	39:42:00 °N	44:17:00 °E
76. Turkey Istanbul	41:02:00 °N	028:59:00 °E
77. Turkey Izmir	38:25:00 °N	27:09:00 °E
78. Turkey Antalya	36:53:00 °N	30:42:00 °E
79. Turkey Diyarbakır	37:55:00 °N	40:14:00 °E
80. Turkey Samsun	41:17:00 °N	36:20:00 °E
81. UK Glasgow	55:52:00 °N	004:18:00 °W
82. UK London	51:30:00 °N	000:10:00 °W
83. UK Manchester	53:27:00 °N	002:15:00 °W
84. UK Plymouth	50:23:00 °N	004:08:00 °W
85. Yugoslavia Belgrade	44:45:30 °N	022:29:30 °E